

---

# **DS6VGA**

## **Digital Advertising Player**

### **User Manual**

---

Please read the instruction carefully before connecting, operating and adjusting the product. And keep this manual for further reference.

---

# CONTENT

## 1. Introduction

Content	01
Safety instructions	02-03
Product Features	04

## 2. System Setup

View of DS6VGA	04
Installation	04
Remote Control Function Keys	05
Installing/ Removing Battery of Remote Control	06

## 3. Operation

Play the Files	07-08
Review/ Change File: Delete/ Copy	08-10
Setup Menu	10-12

## 4. Appendix

FAQ (with Solution) and Specifications	13
After-sale Service Contact	14

---

## SAFETY INSTRUCTIONS

### **Read this user manual**

All safety and operating instructions in this user manual should be read before operating the product

### **Keep this user manual**

This user manual should be retained for future references.

### **Head Warnings**

Be cautious about warning signals on the product.

### **Follow Instructions**

Please follow instructions in this user manual

### **Attachments**

To avoid danger, please do not use attachments not recommended by the product manufacturer.

### **Mounting**

Do not place the product on any unstable cart, stand, tripod or table to avoid injury on children and adult. Please only use attachments indicated by product manufacturer.

### **Temperature**

Please use this product within operating temperature 32°F ~ 100°F (0°C ~ 45°C), relative humidity 20%-80%. The product should be situated away from any heat source such as radiators, heat registers, stoves or other products (including amplifier) to product heat.

### **Avoid Liquid Invasion**

Avoid the invasion of any liquid. Avoid placing it near bathtub, sink, kitchen, wet basement or swimming pool. Do not place product on any uneven surfaces and keep a distance of at least 6 inches from wall. Do not place heavy objects on top of the unit and at sealed areas to avoid heat ventilation problems.

### **Product Protection**

Please do not place any attachment or parts inside the product to avoid contacts with voltage points that could result an electric shock or fire.

### **Heat Ventilation**

There is no heat ventilation on the upper and lower part of the product, therefore to avoid over heating, please do not block any ventilation openings with objects (e.g. carpet). Please allow the opening to have **10cm** distance for ventilation.

### **Grounding or Polarization**

This product could be equipped with an alternate plug.

### **Power –Cord Protection**

Power supply cords should be routed so that they are unlikely to be walked on or pitched by items placed upon them. Pay attention to the connection of plugs.

### **Power Sources**

This product should be operated only from the type pf power source indicated on the rear panel. If you are unsure of the type of power supply to your home, consult your product purchaser or local power company.

### **Lighting and storms**

Unplug the outlet during lighting, storms or long unused periods. This will prevent damages and power-line surges to the product.

### **Overloading**

Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.

---

### **Damage Handling**

Unplug this product from the outlet of wall and request qualified service personnel under the following conditions:

- when the power supply cord or plug is damaged
- when the picture display gets dimmer
- when liquid has been spilled or objects have fallen on to the product
- when the product has been exposed to rain or water.
- Adjust only those controls that are in the instruction manual. For improper adjustments may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- When the product exhibits a distinct change in performance-this indicates a need for repair service.

### **Replacement parts**

When replacement parts are required, be sure that the technician uses replacement parts specified by the manufacturer or parts with same features. Unauthorized substitution may result in fire, electric shock or other hazards.

### **Safety Check**

Upon completion of any service or repair to this product, ensure technician for proper operating condition performs safety checks.

### **Warnings**

If the battery of remote control is incorrectly replaced, there will be a danger of explosion.

### **Storage**

Keep the product at dim areas, room temperature and low humidity to maintain original condition. This will avoid danger.

### **Transportation**

Since the product consists of glass and delicate electronic components, excessive shock or drop will result damages. Please handle the product carefully to minimize shock during transportation.

### **Recycling**

The product utilizes tin-lead solder, and has a fluorescent lamp containing a small amount of mercury. For environmental considerations, disposal of these materials may be regulated in your community. For disposal or recycling information, please contact your local authorities, or Electronics Industries Alliance: <http://www.eiae.org/>

### **Cleaning**

 
Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.

## PRODUCT FEATURES


- Diversified media play modes.
- Media playing format: JPEG/MPEG4-Xvid/Divx (.avi) 3000kpbs/ 25fps  
Memory card supported: CF, SD, MMC, xD card, Memory Stick (or Duo) and USB FLASH.
- The player can repeat the media file automatically.
- User can play and review the photos or music in the file one by one.
- Multi-functional application.
- AV, SV, VGA output.
- Super-slim card-shaped remote control

## VIEW OF DS6VGA


### Front View

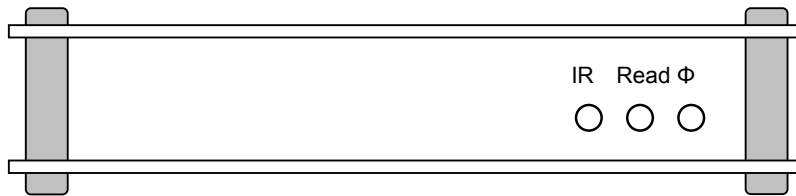

### Rear View

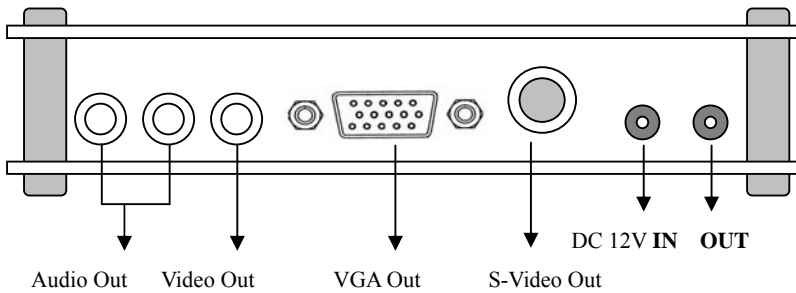 


### Side Views

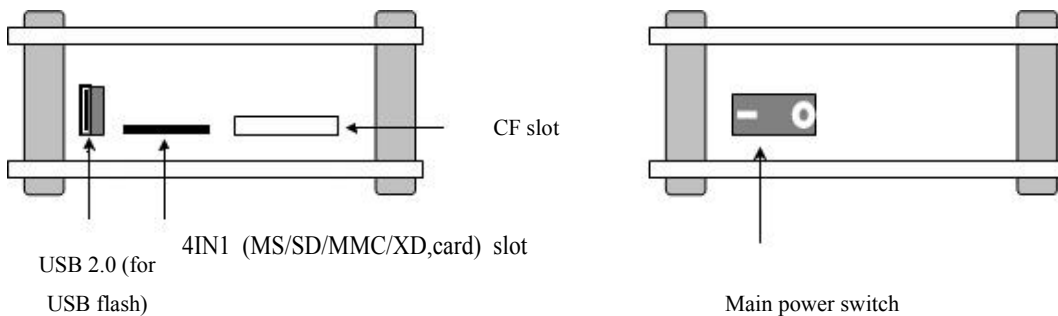 


## INSTALLATION

 1. Take out the power cord and adaptor from the accessories case.
2. Insert the plug of adaptor into the **DC IN socket** of DS6VGA.
3. Connect the adaptor and power cord.
4. Insert the plug of the power cord into the power jack.

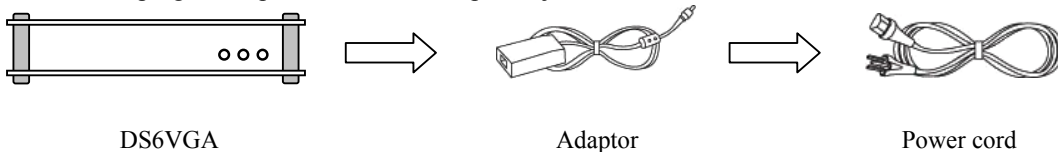

## REMOTE CONTROL FUNCTION KEYS

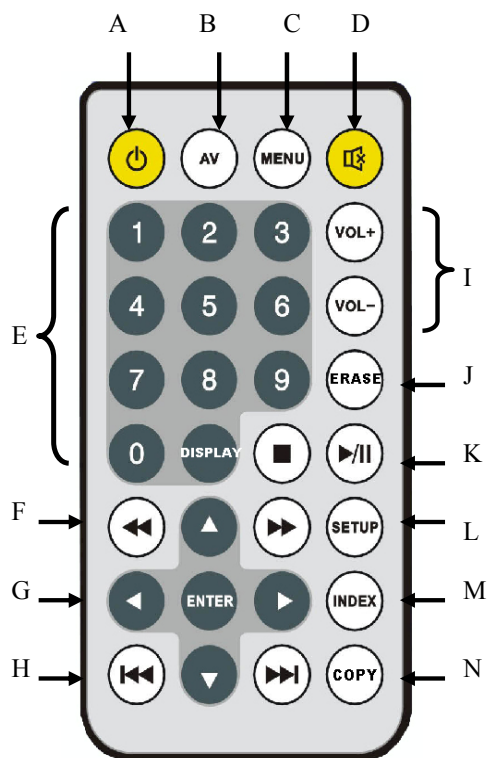 

**A: Standby:** Power ON/ OFF

**B. A/V:** Selecting video output signal: Composite video/ S-Video/ VGA.

**C. Menu:** Return to main menu (Photo/ Music/ Video/ File)

**D. Mute**

**E. Numeric keys:** Select the file to be played (1-0)/ **Display:** Display file, delete/copy file

**F/ H. FWD/REV:** During playing film or music file, press the key to scan the file backward or forward at 2X, 4X, 6X and 8X times' speed.

**G. Navigation keys/ Enter:** Press Left/Right or Up/Down and Enter to select.

**F. FF/ RW:** During playing movie or music file, press the key to play the file backward or forward at 2X, 4X, 6X and 8X times' speed.

**I. VOL+/-:** Increase/reduce the volume level.

**J. Erase:** Erase all files inside the CF card in the file review interface.

**K. Play/Pause:** Play or pause the playback of film, photo or music.

**L. Setup:** Enter the setup menu.

**M. Index:** File review interfaces of all storage media.

**J. Copy:** Copy all files from the USB FLASH to the CF card in the file review interface.

















